

Tusk D-Flex MX Shields



Congratulations on your purchase of the Tusk MX D-flex full wrap around handguard Kit. These handguards are designed to protect your hands from debris as well as prevent possible broken levers. Please take note of the information and instructions below to get the most out of your Tusk Product.

Kit Components:

- (2) Tusk MX D-flex hand shields.
- (2) Tusk wrap around aluminum bars.
- (4) Screws (2 long & 2 short).
- (2) Handlebar inserts.
- (2) Mid-bar clamps.



Tools Needed:

- #1 Phillips screwdriver
- 13/64" drill bit (5mm)
- Drill
- 5mm allen



Step 1:

Take both of the Tusk D-flex hand shields and locate the Pre-made indent on the backside.



Step 2:

Drill a hole through the hand shield in this location.

Tech Tip: You can drill through the backside first for proper alignment, and then drill through the front to remove burrs.




Tusk D-Flex MX Guards



Step 3:

Press the Aluminum wrap-around bar into the designated slot on the backside of the hand shield. Insure that the holes are lined up and the hand shields are pressed onto the correct side (left or right hand side).

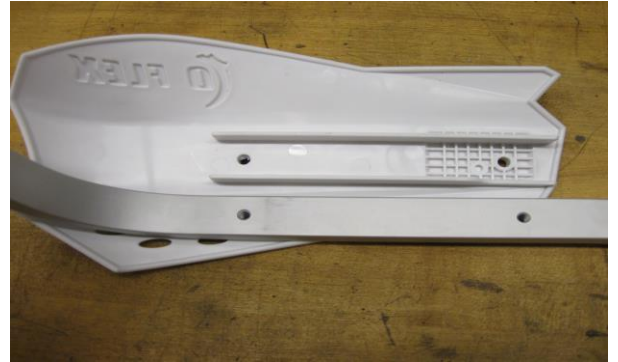

Step 4:

Using a Phillips screwdriver, install the screws into the hand shield.

Note: The longer screws go on the inboard side and the shorter screws towards the outside.



Step 5:

Repeat steps for the opposing side. The Tusk hand guards are now ready to install on your handlebars. Install the bar inserts and Mid-bar clamps loosely before tightening everything down.



* Retighten as needed. Keep in mind accessories such as a hand guards may loosen over time and with impacts.

If you have any questions please call (800) 336-5437